

HKR and HKR-A REPAIR PARTS LIST

	HKR												
	03	05	05C	06	08	08C	10	10C	15C	20C	21C	3-15	3-20
Element, 3Kw B10375-04S	1												
Element, 5Kw B10375-05S		1	1										
Element, 6Kw B10375-06S				1									
Element, 8Kw B10375-07S					1	1							
Element, 10Kw B10375-08S							1	1					
Element, 15Kw B10375-09S									1				
Element, 20Kw B10375-10S										1			
3-Phase Element, 15kw B10375-11S												1	
3-Phase Element, 20kw B10375-12S													1
Element, 21Kw B10375-13S											1		
Sequencer, Single Stk B1256551	1	1	1						1				
Sequencer, Double Stk B1256552				1	1	1	1	1	1	1	1	1	1
Sequencer, Double Stk B1256557										1	1		
30a. Circuit Breaker B1753510			1						1				
40a. Circuit Breaker B1753517						1							
60a. Circuit Breaker B1753511								1	1	2	2		
3-Phase Contactor B1360335												1	1
Terminal Block B1368250	1	1		1	1		1					1	1
Wire Harness 1378700	1	1	1	1	1	1	1	1					
Wire Harness 1378701									1	1	1		
Wire Harness 1378714												1	1
Thermal Overload B1370186	1	1	1	2	2	2	2	2	3	4	4	3	3

INFORMATION CONTAINED IS SUBJECT TO CHANGE WITHOUT NOTICE.

	HKR-A												
	03A	05A	05CA	06A	08A	08CA	10A	10CA	15CA	20CA	21CA	3-15A	3-20A
Element, 3Kw* B1037514	1												
Element, 5Kw* B1037515		1	1										
Element, 6Kw* B1037516				1									
Element, 8Kw* B1037517					1	1							
Element, 10Kw* B1037518							1	1					
Element, 15Kw* B1037519									1				
Element, 20Kw* B1037520										1			
Element, 21Kw* B1037523											1		
3-Ph Element, 15Kw* B1037521												1	
3-Ph Element, 20Kw* B1037522													1
Sequencer, Single Stk B1256558	1	1	1										
Sequencer, Double Stk B1256559				1	1	1	1	1	1	1	1	1	1
Sequencer, Double Stk B1256560										1	1		
30a. Circuit Breaker B1753510			1						1				
40a. Circuit Breaker B1753517						1							
60a. Circuit Breaker B1753511								1	1	2	2		
3-Phase Contactor B1360335												1	1
Terminal Block B1368250	1	1		1	1		1					1	1
Wire Harness 1378701	1	1	1	1	1	1	1	1	1	1	1		
Wire Harness 1378714												1	1

*Note the Thermal Overloads and the Fusible Links are part of the Element and not sold separately.